

Activation/Update firmware for Your Printer

- (1) Plug into a power supply and switch on the printer.
- (2) Connect to the printer's Wi-Fi hotspot.
 - a. Find the SSID and password for this printer on the side label of the printer.



- b. Open the Wi-Fi Setting on your PC or mobile device, and select the corresponding SSID and type in password to connect.
- (3) Configure the printer to connect to the Internet.
 - a. Find IP address on the side label of the printer.



- b. Access the activation page on your web browser on either your PC or mobile device.
 - c. Click on "Check Network" button to check if the printer is connected with internet, skip this step if already connected, otherwise continue step "d".

- d. Choose Wi-Fi from the SSID dropdown menu, type in password and click on “Connect” button to connect internet.

192.168.12.1

ACTIVATING

UNIZ

PLEASE CONNECT TO THE INTERNET BEFORE ACTIVATION

Check Network

If your printer has not connected to the Internet, please connect as following :

SSID: Please select your SSID

Password: Wifi password

Connect

If you do not have a account, please [click here](#) to register.

E-mail:

Password:

I agree to [user agreement](#)

Activate

[Update firmware](#)

(4) Activate/Update firmware

Click Activate/Update firmware Button to activate/update firmware your printer.

Tips:

1. If there are issues connecting to the printer via Wi-Fi, try restarting the printer.
2. If the printer is connected successfully, but the update process indicates that there is a connection error, and you should try restarting the printer.
3. Once update is completed, disconnect your PC or mobile device from the printer's SSID.

